

# SPEED REGULATOR FOR SINGOL PHASE 10A

MANUAL REGULATOR ON THE FRONT PANNEL.

**G!!!**

*REFULLY THAT THE VOLTAGE ON THE MOTOR LABEL IS COMPATIBLE WITH THAT OF TH. DR.*

ment must be used only in the designated way.  
 ublisher is not responsible for any further or different usage and does not accept any  
 ty for damage for not correct connection and any injury or damage to people or objects.


## TECHNICAL SPECIFICATIONS

	230 V AC
Speed regulation	CE regulation
Protection class	IP54
Power	2200 W
Control	Bipolar
Current	Bipolar
	10 Amp
Overload protection	VDR
Speed regulation	100%-50%

## INSTALLATION

Supply the power to the circuit board maintaining Neutral and Earth phases.  
 Connect the motor to the circuit board at "M" as well as to the Earth.  
 Connect the hood light power to the light symbol to the circuit board.  
 To adjust the regulator, rotate the potentiometer in an anti-clockwise direction until it stops.  
 Set the "MIN" trimmer to the desired minimum speed. Rotate the potentiometer again in a  
 clockwise direction until it stops. Set the "MAX" trimmer to the desired maximum speed.  
**CAUTION:** When the motor turn on, in the Aux Point you have 230 Vac and you can connect  
 a gas valve.

### Electric connection

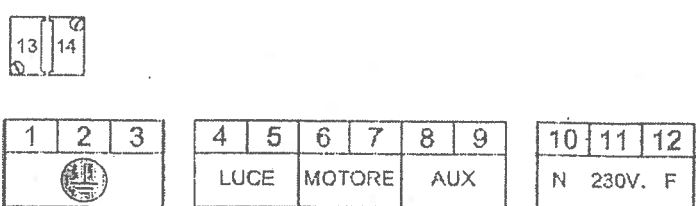

8 A Exit aux 230V  
 9 A Exit aux 230V